

EPOS



Microsoft Teams Room Installation Guide

EXPAND Vision 5

Microsoft Teams Room Installation Guide

Requirements

Included:

- EXPAND Vision 5
- EXPAND Control (Network cable included)
- HDMI Cable (Connects EXPAND Vision 5 and the Display/Monitor)
- Power supply

Not included:

- Network cable (Connects EXPAND Vision 5 and network port)
- Display / TV Monitor

Optional:

- USB-C to USB-C Cable (Connects your laptop to the camera if you are in a BYOD room)
- HDMI Cable (Content sharing from your laptop)
- USB-C to HDMI cable for Dual screen support
- EXPAND 80 Speakerphone + 2 extension mics for EXPAND 80

What to Consider

Prerequisites

Network Ports

- Two network ports in the same subnet are required to pair the EXPAND Control with the EXPAND Vision 5.
- One of these ports must support Power over Ethernet (PoE) to power the EXPAND Control when connected with a network cable.

Microsoft Teams License

- Learn more about assignment and configuration of MTR Room Basic or PRO license [here](#)

Firewall port opening

- The tool probes your network to check if all firewall ports are open.
If ports are not reachable you have to open the relevant ports on your security platforms.
[Firewall port opening for MS Teams](#) (Network Assessment tool)

Firewall Setup for EPOS Manager:

Open firewall port 443 over tcp outbound.

For accessing application URL's:

<https://enterprise.eposaudio.com>

<https://uiapi.enterprise.eposaudio.com>

<https://api.enterprise.eposaudio.com>

<https://video.enterprise.eposaudio.com>

For accessing static content (device image, description, software and firmware):

<https://update.eposstorage.com>

For Logging:

<https://agentlog.table.core.windows.net/>

Check out the admin guide [here](#)

How to enroll EXPAND Vision 5 to EPOS Manager


Sign up for a tenant here:

[EPOS Manager \(eposaudio.com\)](https://eposaudio.com)

Log in to the EPOS Manager tenant:

Choose Provision > Create quick connect code

Insert the data relevant for your video device. If you do not limit the "Number of Devices Allowed" The QR code can be reused for multiple video devices. Choose Save and use the QR code to enroll the device with settings provided and get it enrolled to EPOS Manager.

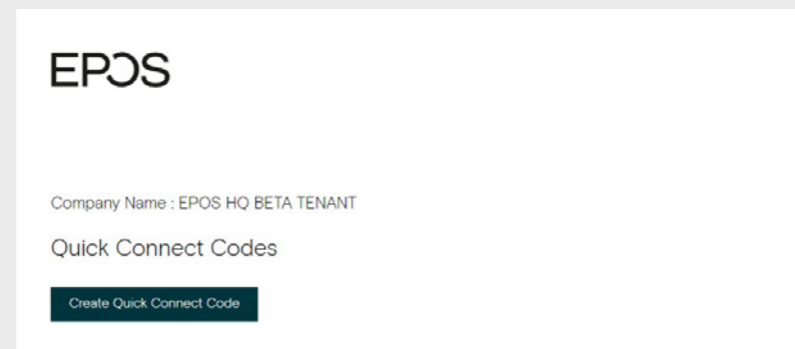


EPOS

Company Name : EPOS HQ BETA TENANT

Quick Connect Codes

Create Quick Connect Code

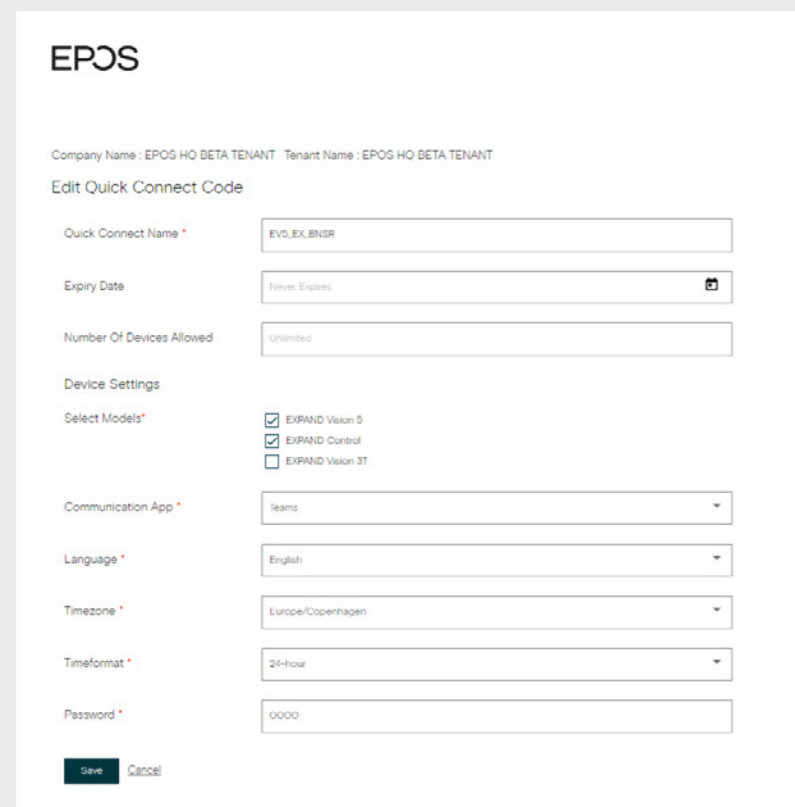

EPOS

Company Name : EPOS HQ BETA TENANT Tenant Name : EPOS HQ BETA TENANT

Edit Quick Connect Code

Quick Connect Name * EV5_EX_BNSR

Expiry Date Never Expires

Number Of Devices Allowed Unlimited

Device Settings

Select Models* EXPAND Vision 5 EXPAND Control EXPAND Vision 3T

Communication App * teams

Language * English

Timezone * Europe/Copenhagen

Timeformat * 24-hour

Password * 0000

Save Cancel

Quick Connect QR Code: GXQICL7P7




[Download QR Code](#)

[Copy QR Code](#)

Use the QR code to enroll multiple devices into EPOS Manager with relevant settings. (NB! Do not use this QR code for your deployment, make sure you create your own)


Setup & Installation

First time setup / Enrollment with QR code

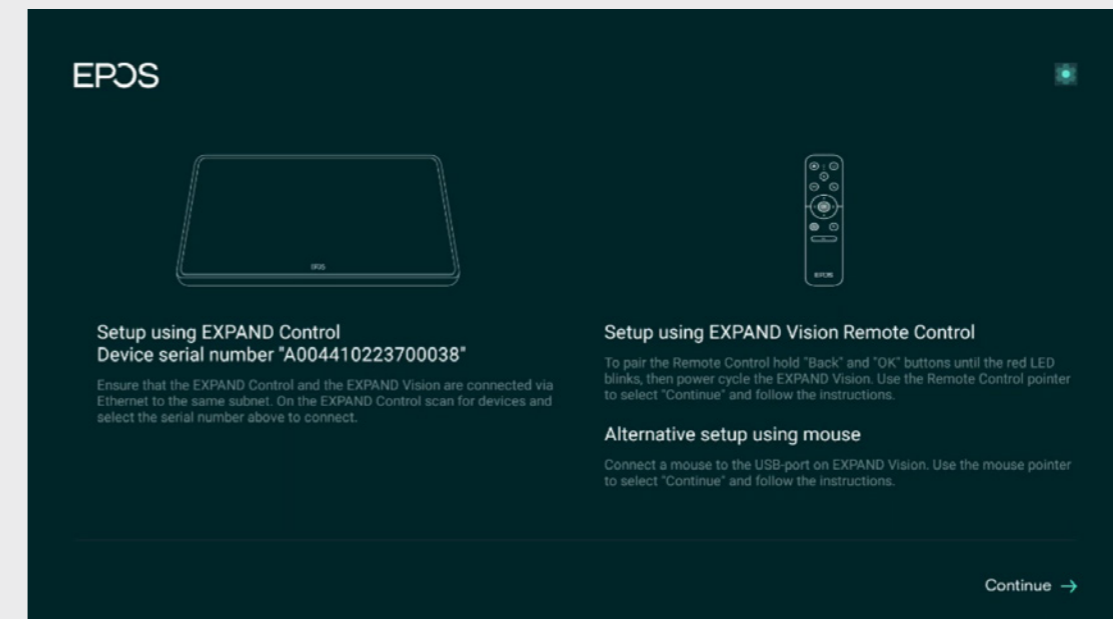


Connect all the necessary cables to the EXPAND Vision 5. Remember to always attach the power cord last. Once all cables are properly connected, allow the device to boot up.

For more information see the Wiring Diagrams [here](#).

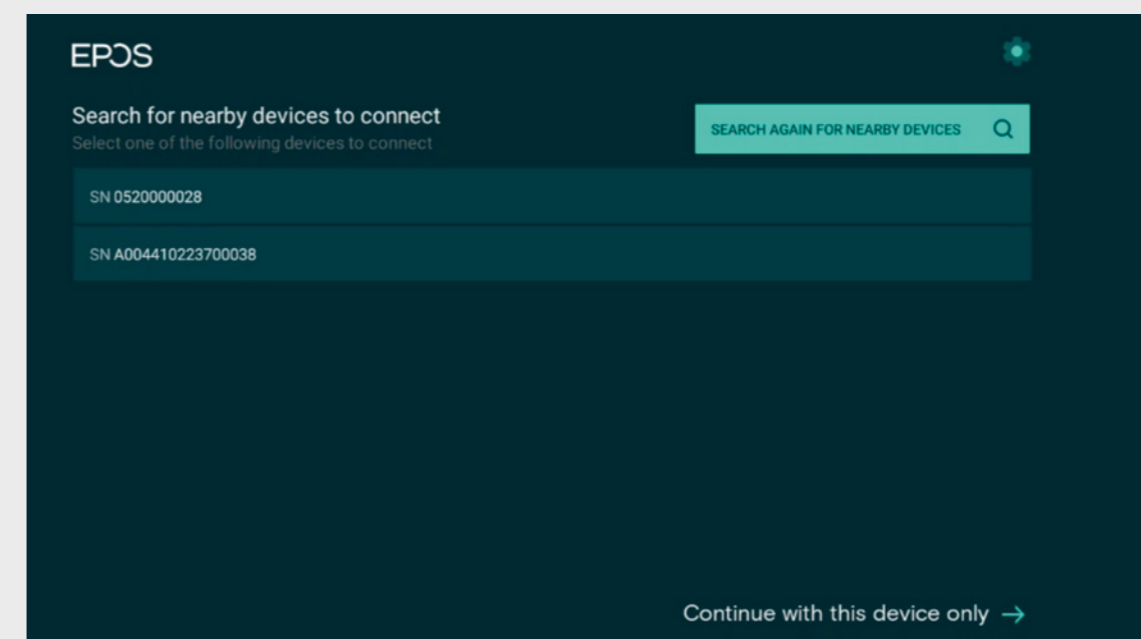


Attach the PoE network to the EXPAND Control with enclosed network cable. Choose the serial number of the EXPAND Vision 5. Serial number is displayed on the monitor.

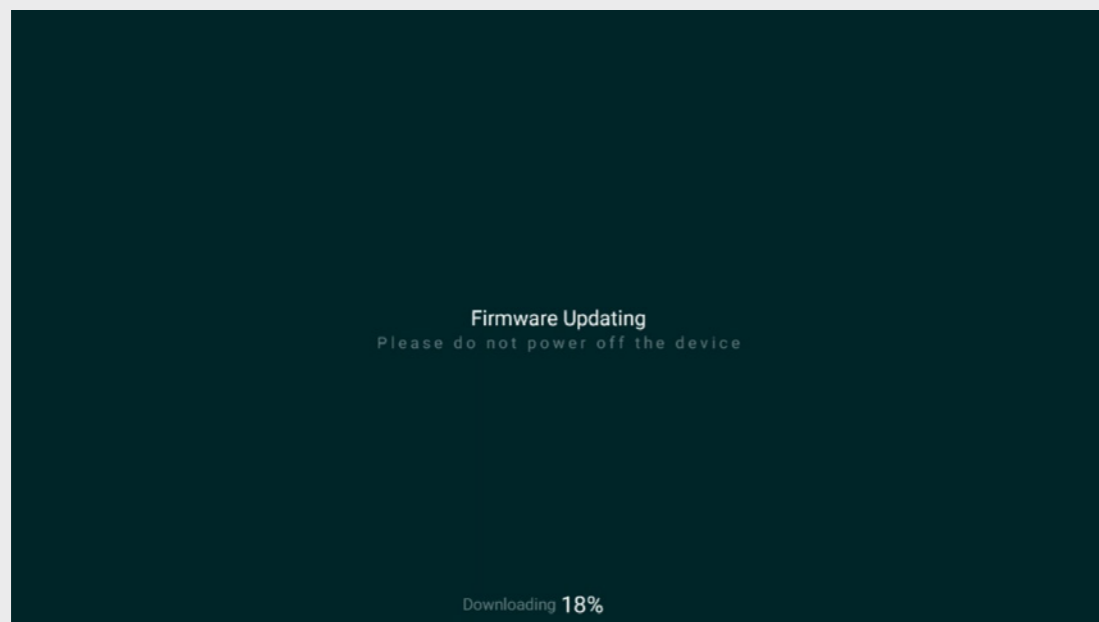


Use the created QR code to enroll the devices into EPOS Manager. The system will automatically deploy the settings contained in the QR code and upgrade the video device and controller to the latest FW.


Enrollment without QR code

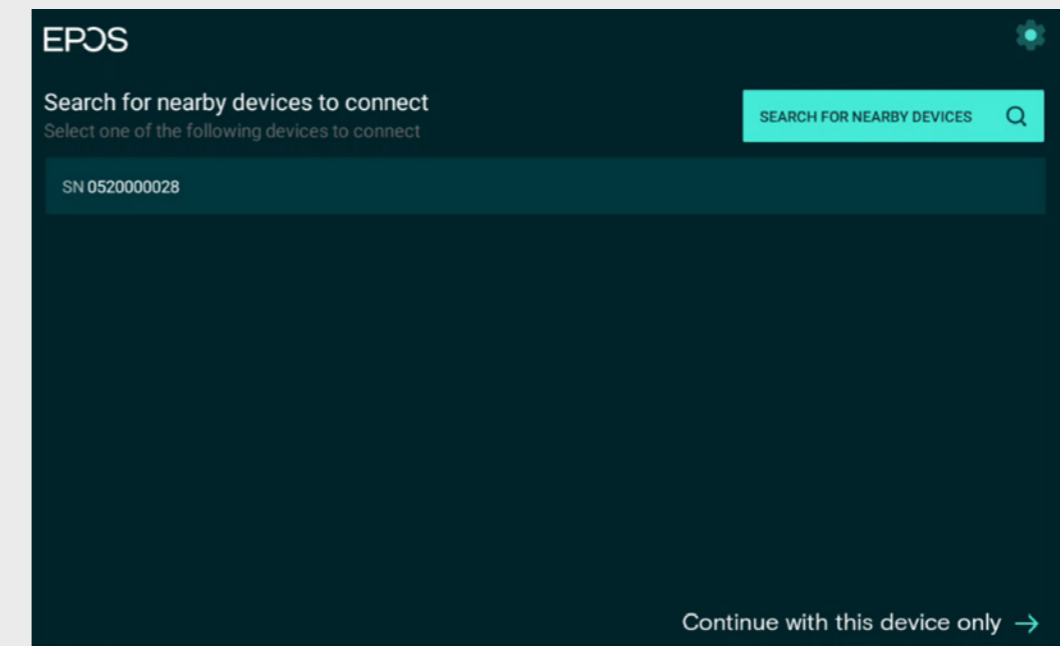


Choose Continue with this device only.

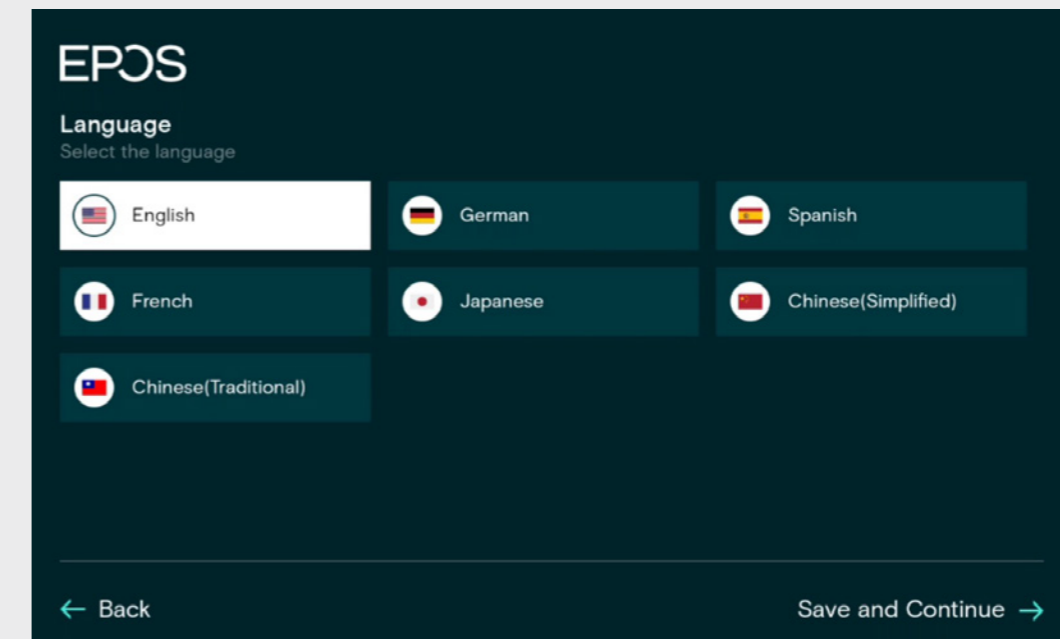


Choose Language > Save and Continue.

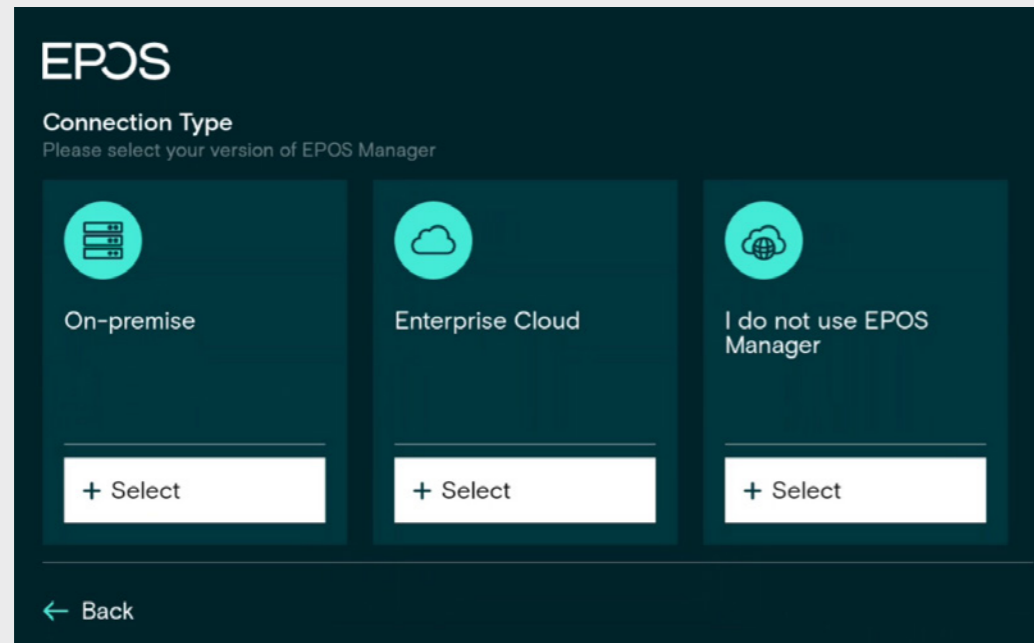


I do not use EPOS Manager > choose select.

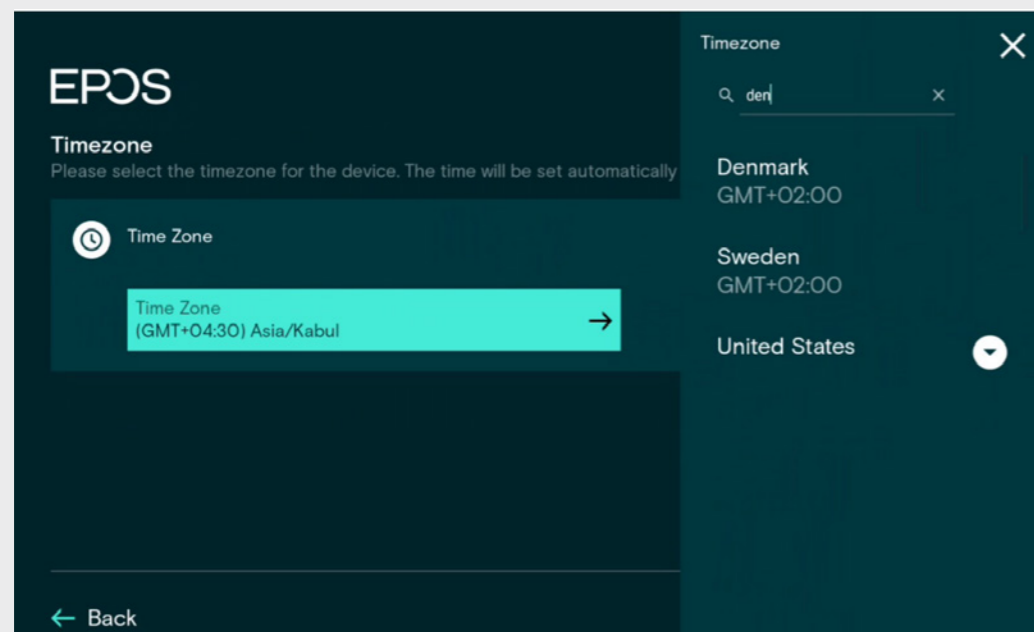

Search for your Time zone.

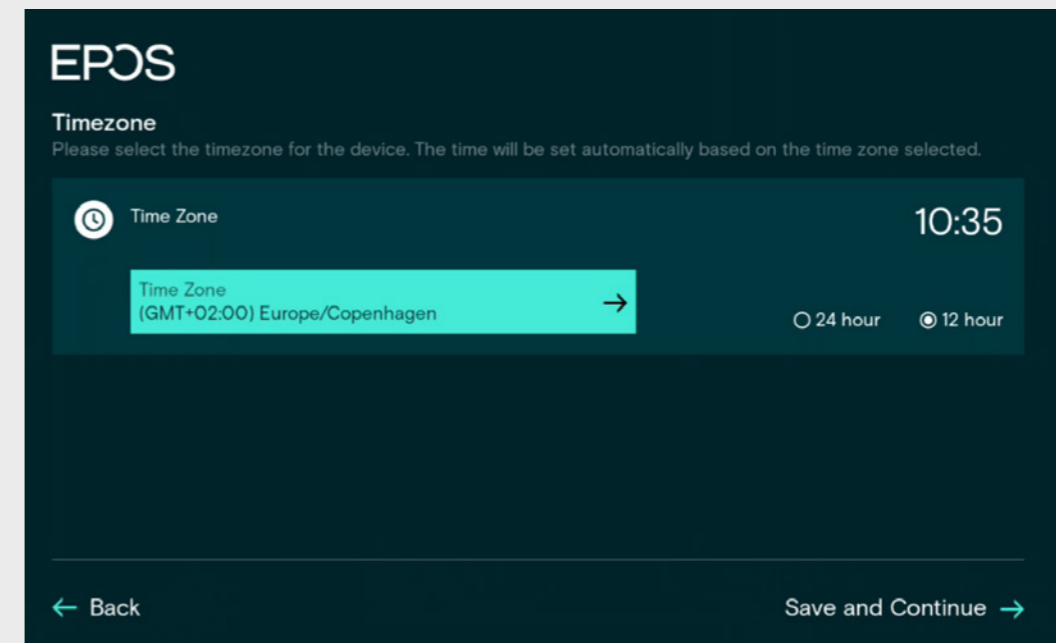


Pick your Country / Time zone and hour.

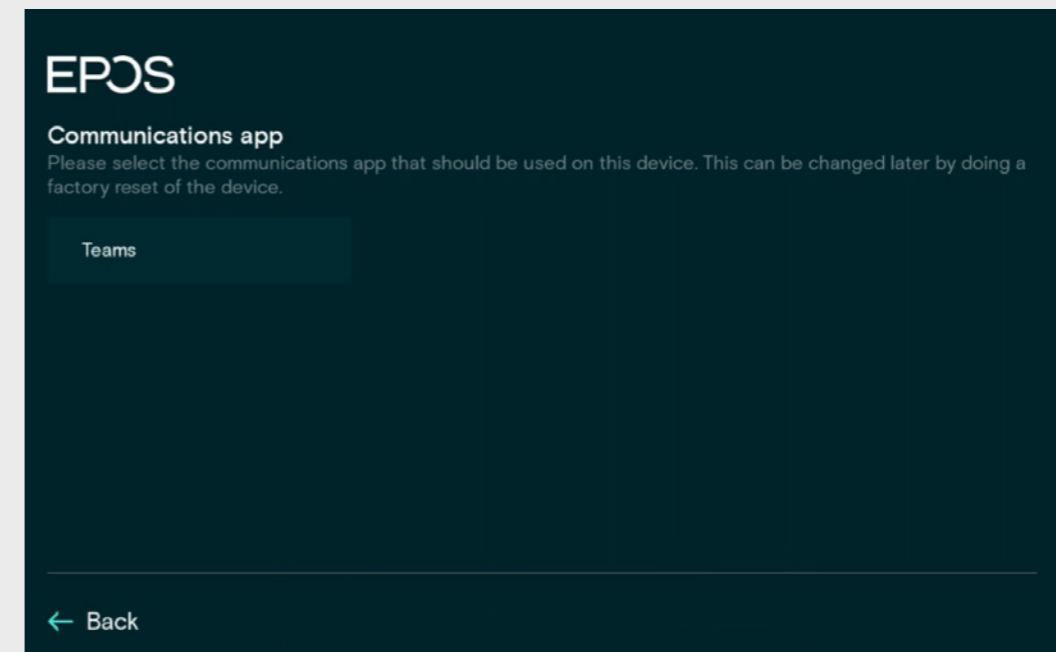


Choose Teams as UC provider for your product.

EXPAND Vision 5 Display

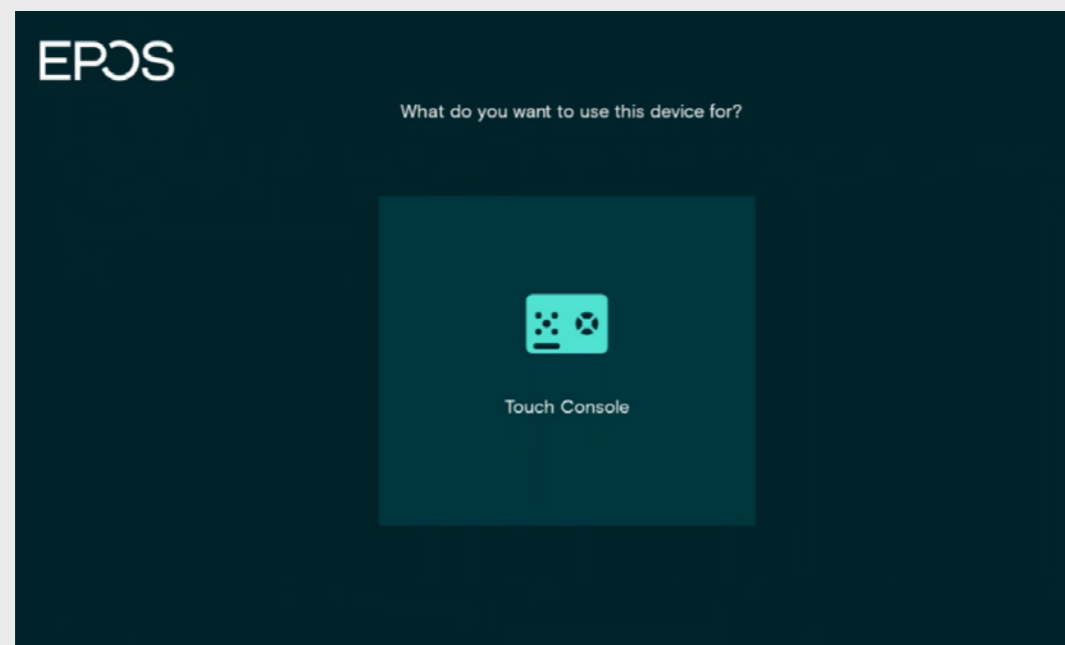


Choose Touch Console.

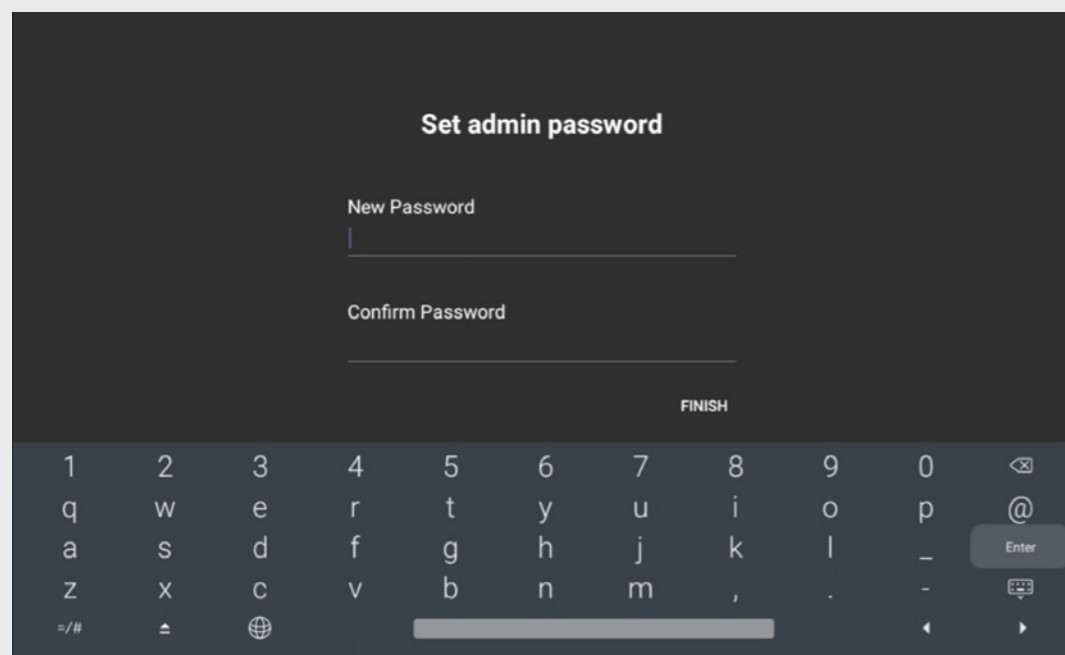


Choose Finish and setup is completed. Default password is 0000 but best practice is to change this.

Setup is completed > device will now start the MS teams login procedure.

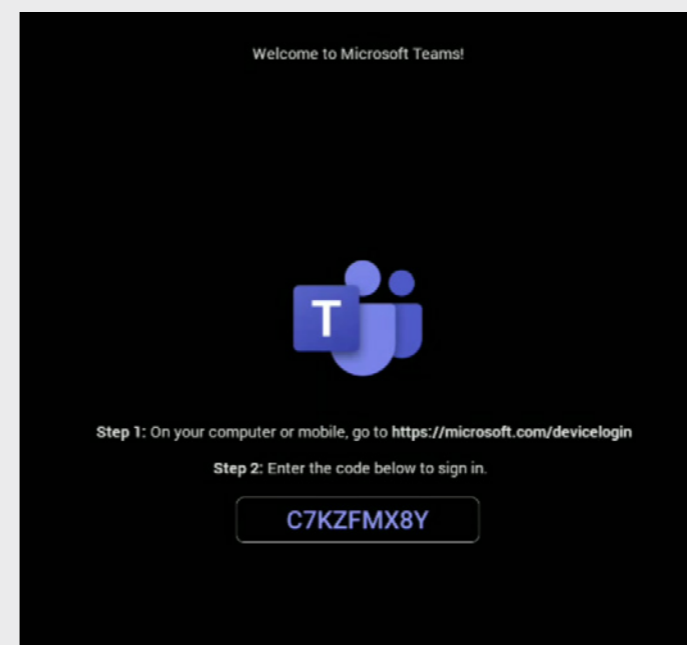


EXPAND Vision 5 MS teams login
Login into MS teams using the code displayed on the monitor of your EXPAND device (use the same MTR account for your EXPAND Vision 5 and EXPAND Control).

EXPAND Control

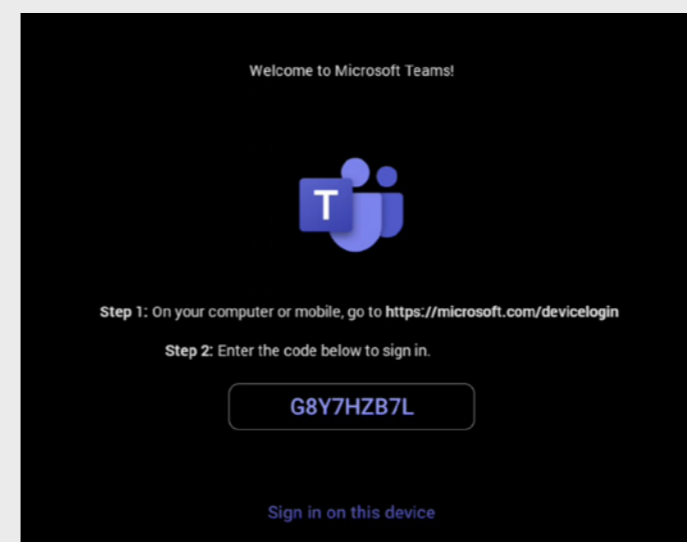


EXPAND Control MS teams login
Login into MS teams using the code displayed on the monitor of your EXPAND device (use the same MTR account for your EXPAND Vision 5 and EXPAND Control).


EXPAND Control

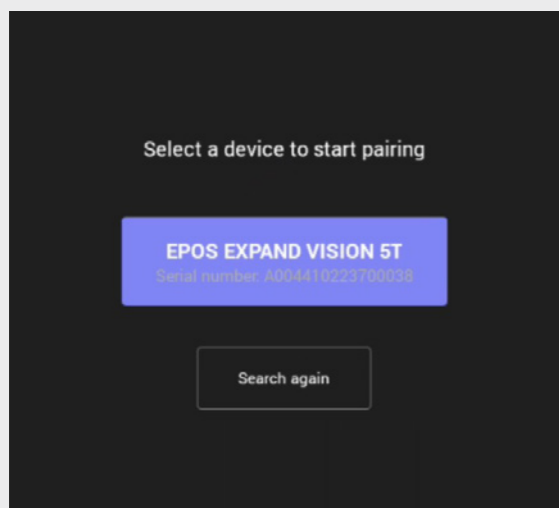

Choose EPOS EXPAND 5T to pair.

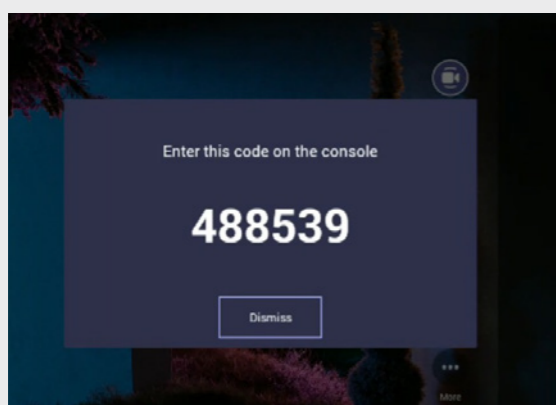



Pairing Code, code displayed on monitor of EXPAND Vision 5.

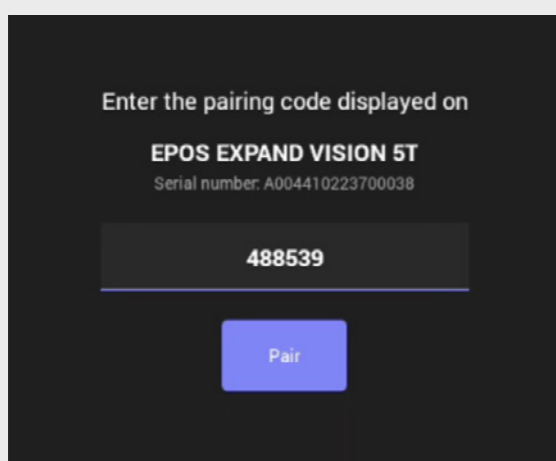


Type in the number from the EXPAND Vision 5 displayed on the monitor and choose pair. Let the systems get paired and an All Set message will appear as successfully paired.

Optional settings for static IP address configuration


At first-time setup note the cog wheel in the right-hand corner. Tapping into this entry gives you the ability to set the device account to a static IP address required together with DNS, NTP and Proxy settings.

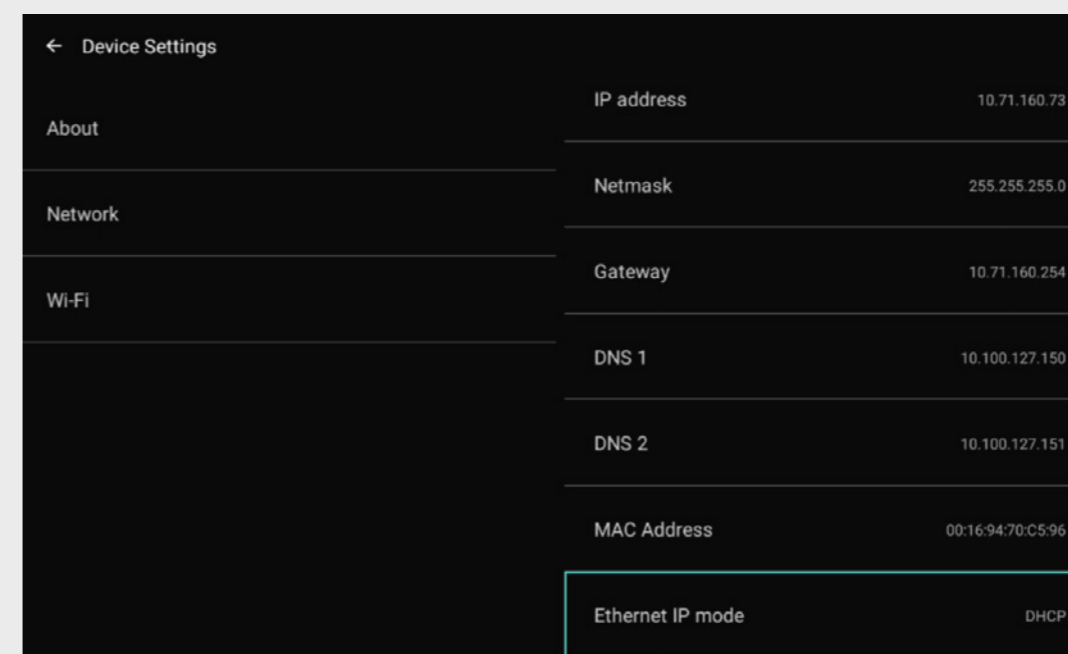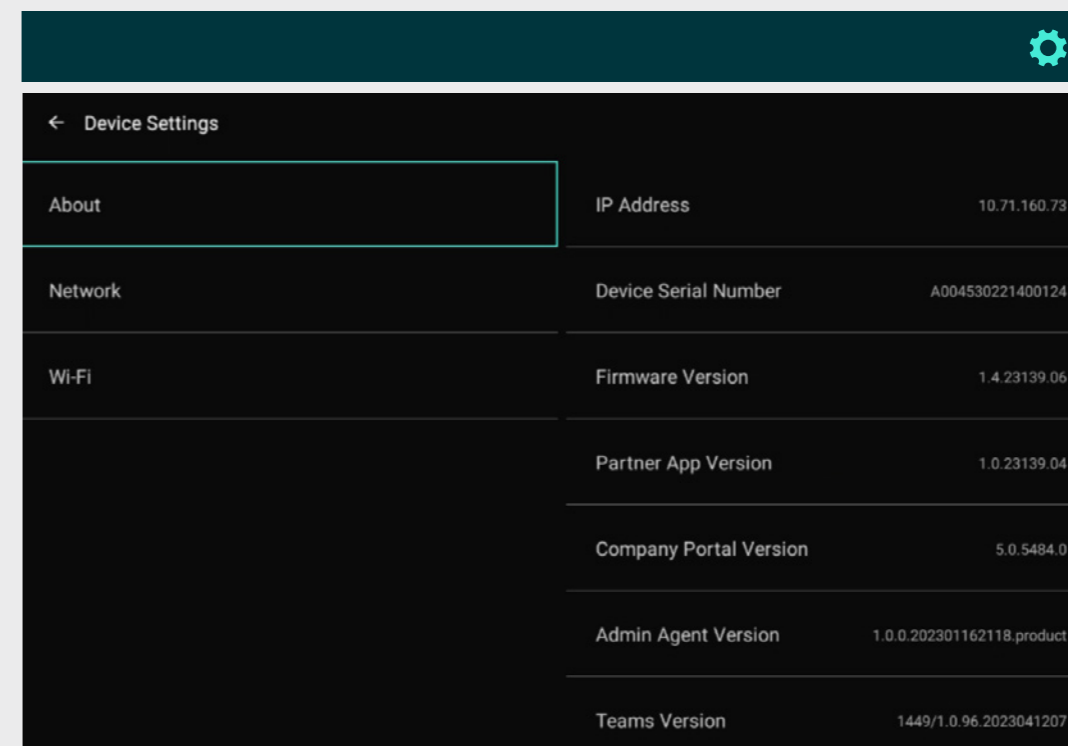


Language & Time Settings

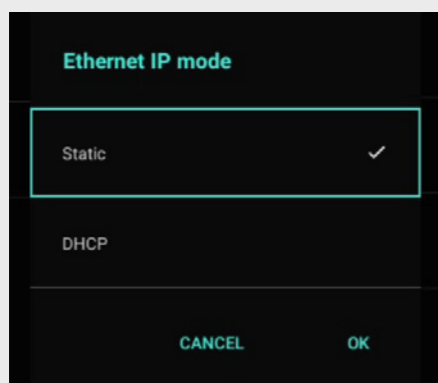

Choose the static option and ok

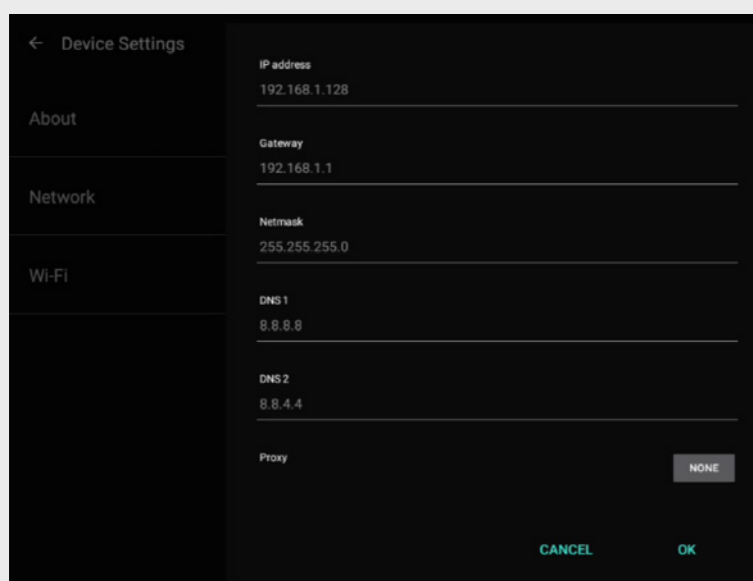


Insert relevant network data.

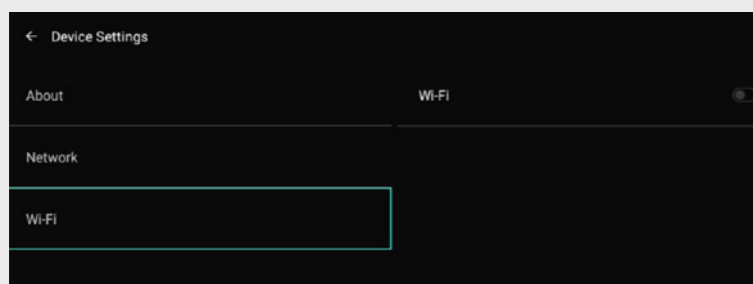


NB! The device supports Wi-Fi. However, we do recommend a wired network whenever possible. If device is connected to the network with a network cable, Wi-Fi cannot be enabled. If Wi-Fi is required for EXPAND Control, make sure you have a Power Injector for the device as there will be no separate PSU for the control.


Verify the settings of the setup

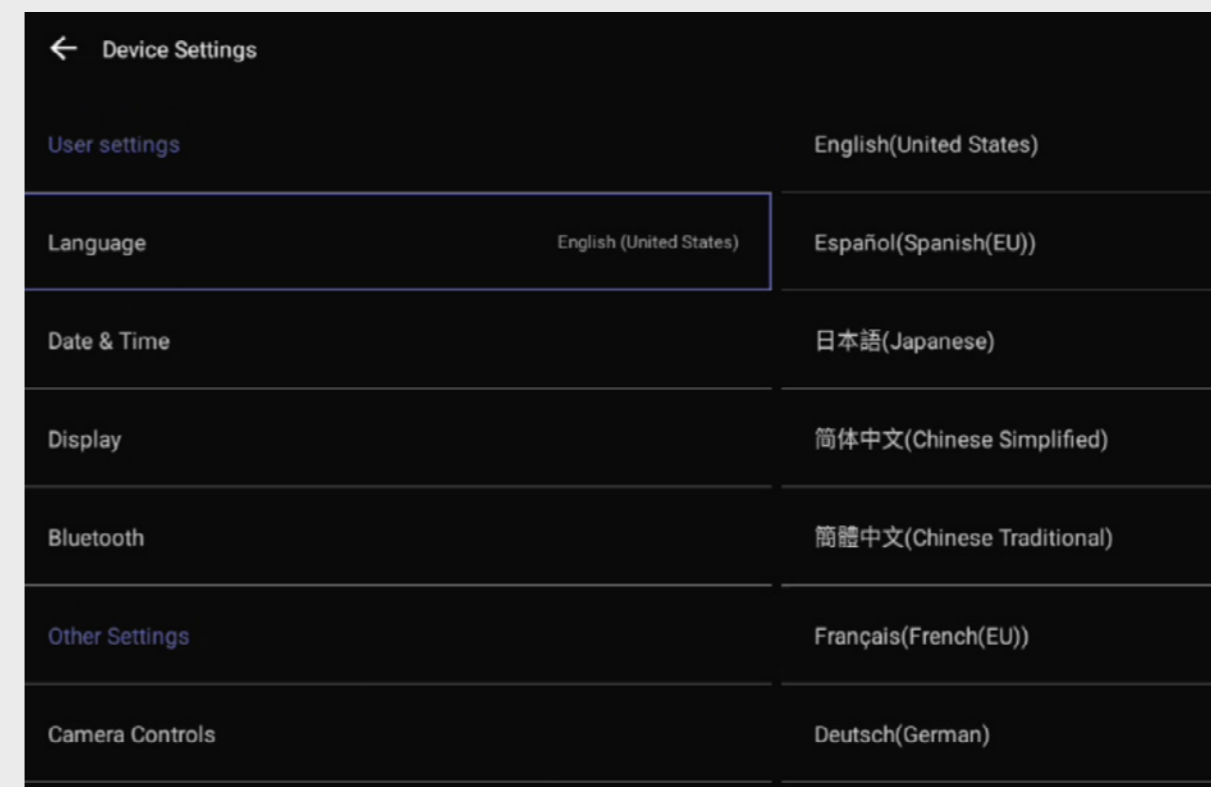


From the Device Settings the settings below can be changed. Date/Time zone Date & Time > Time zone > Choose Zone

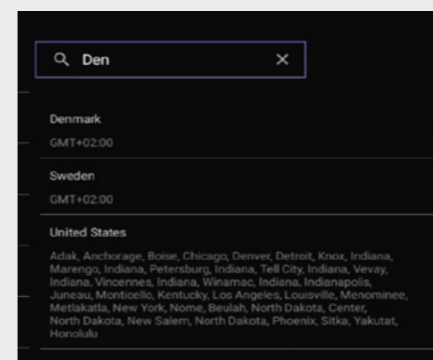

Choose relevant Time Zone


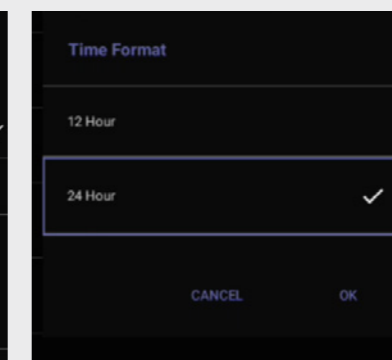


Choose the relevant Time Format

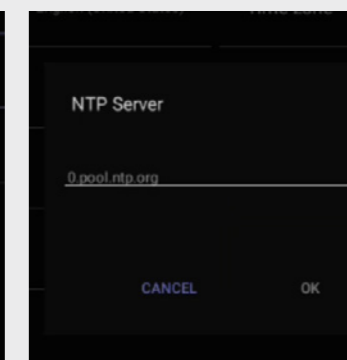


Insert your NTP server address (Optional)

Device Name

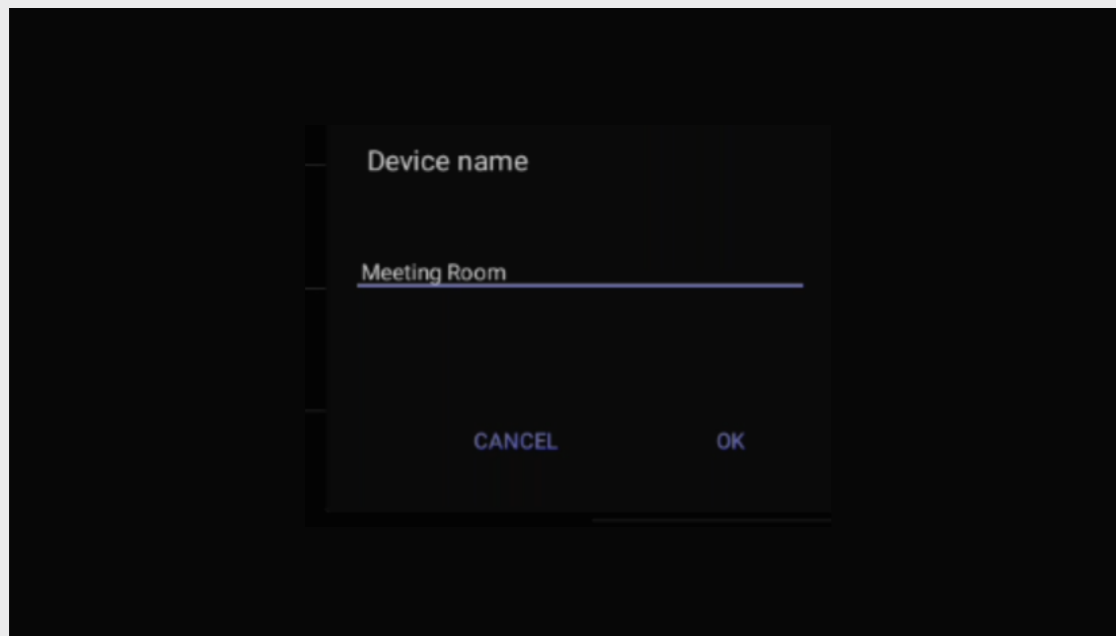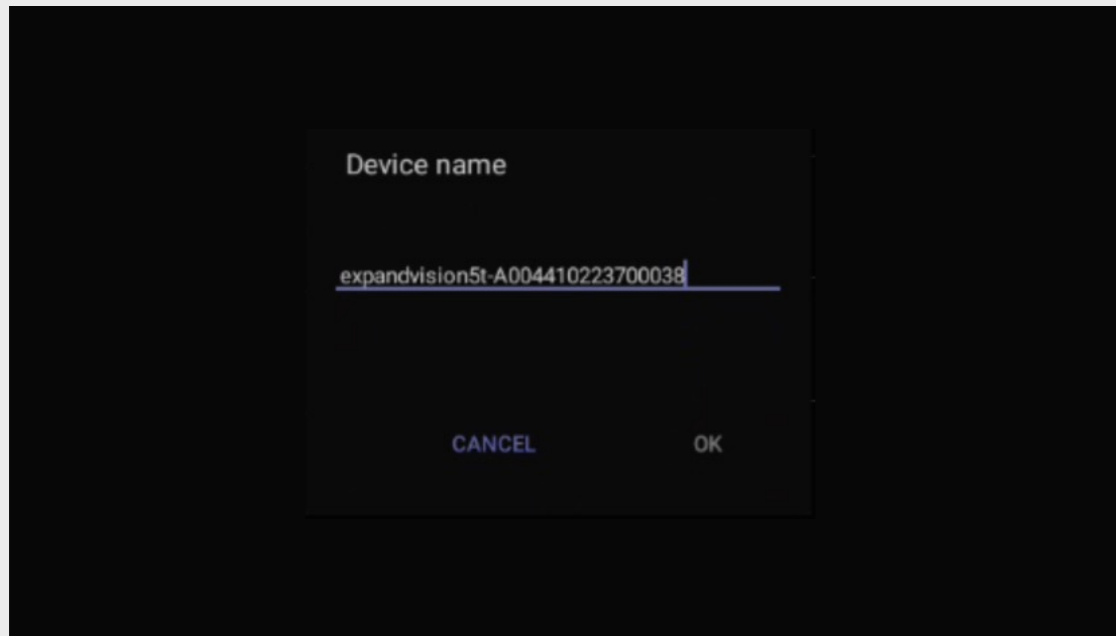


To assign a unique name, delete the default and insert device name according to your naming policy. The name will automatically be synced into EPOS Manager, if enrolled.

Admin Settings

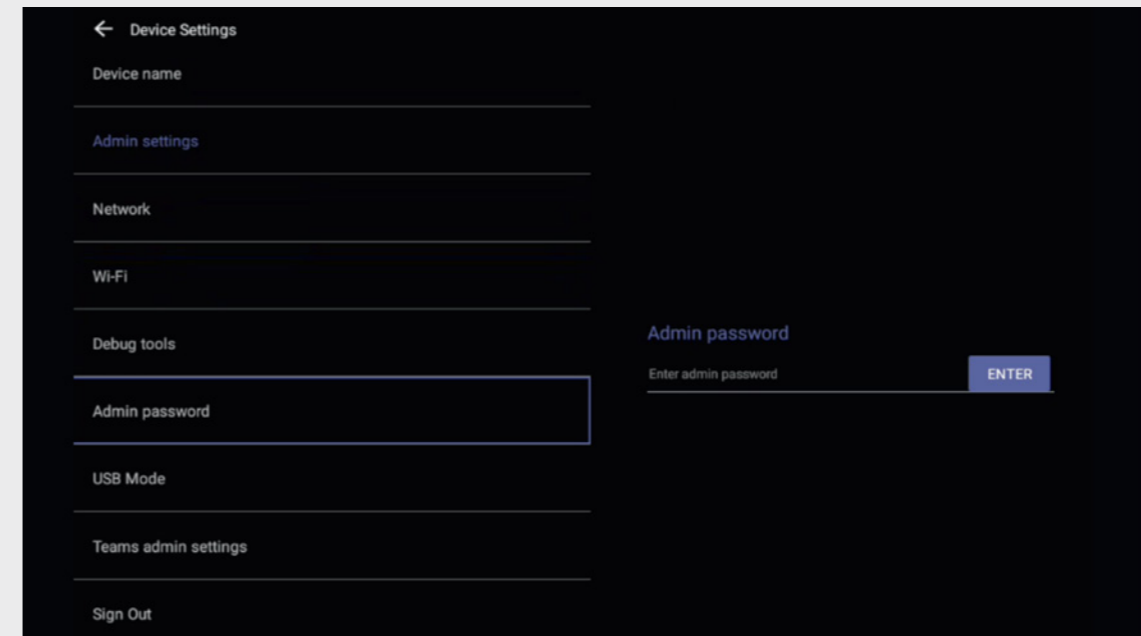


Best practice is to change the default admin password which is 0000.

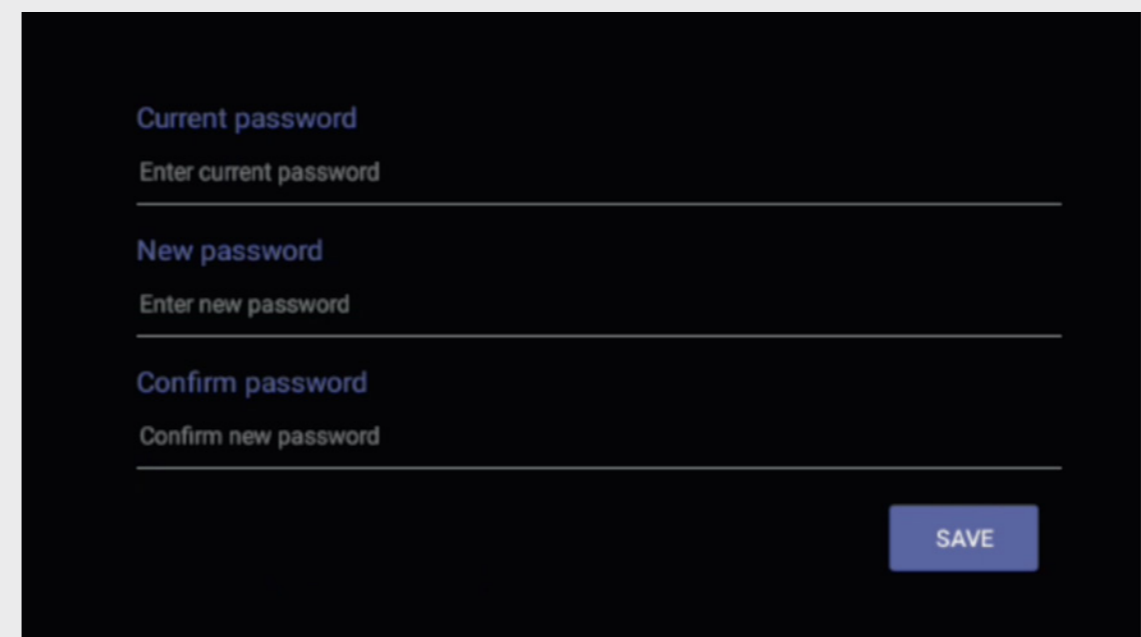


Insert relevant information and choose SAVE.

Verify device details

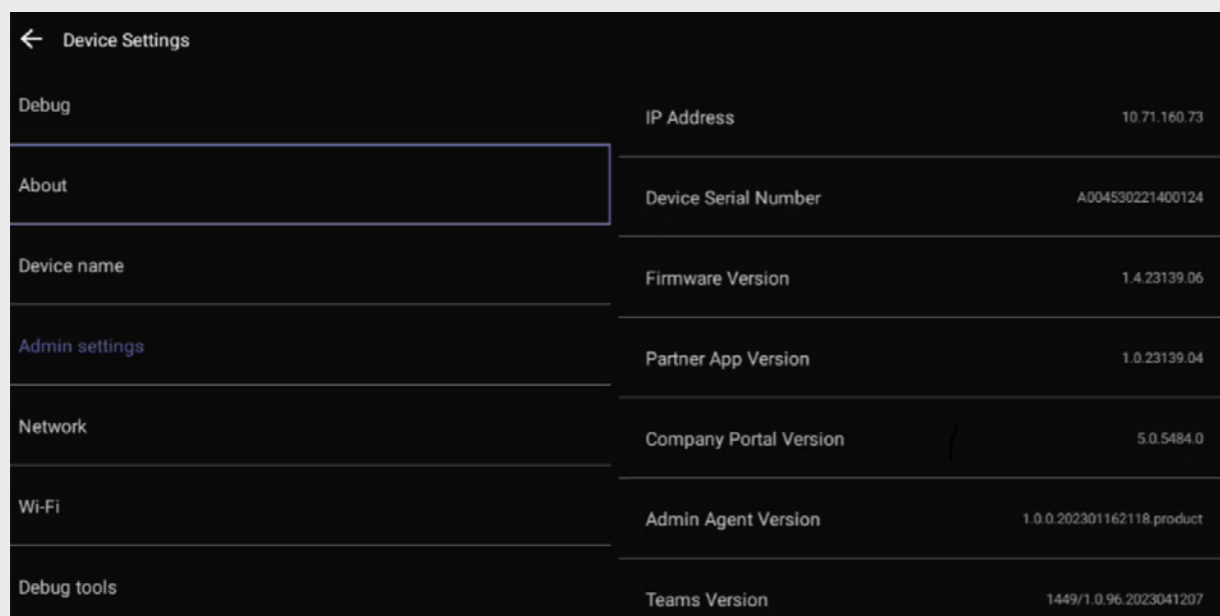


> Device Settings > About display serial number, ip address and versions


Network Settings

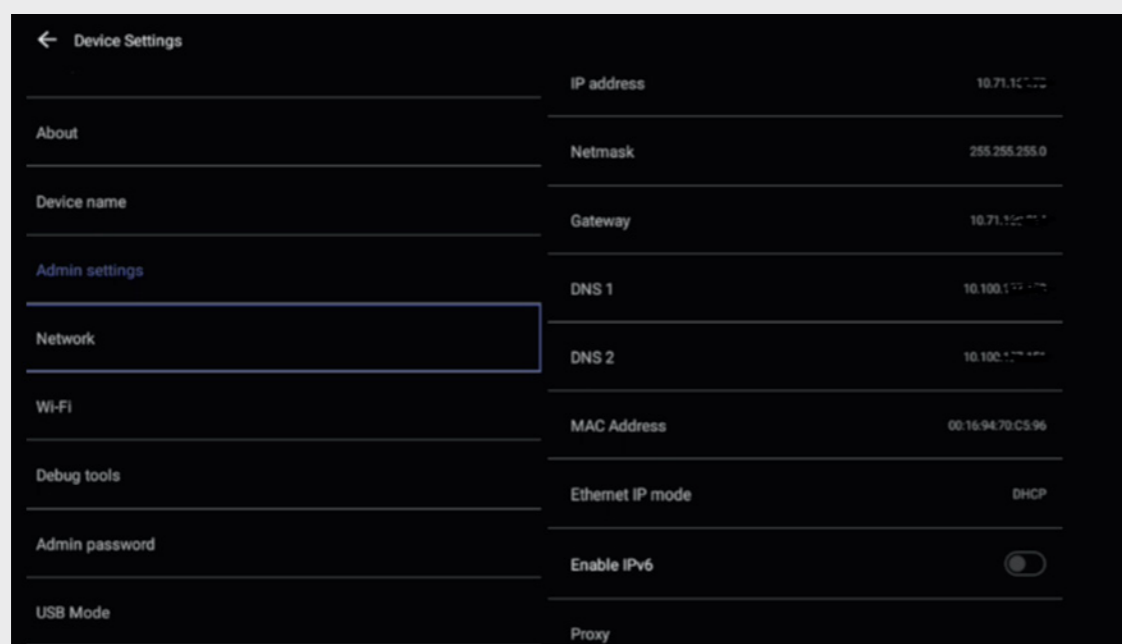

Static IP > Choose Ethernet IP mode.

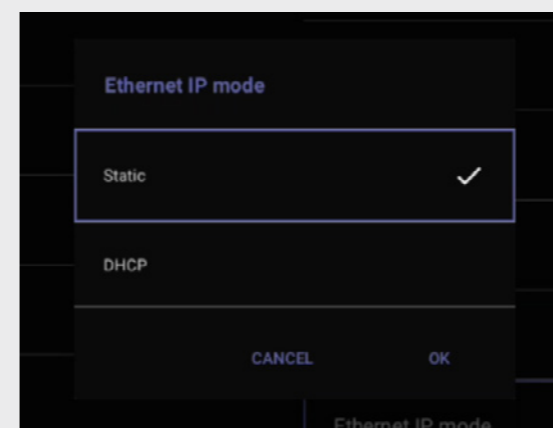


Choose static and then OK

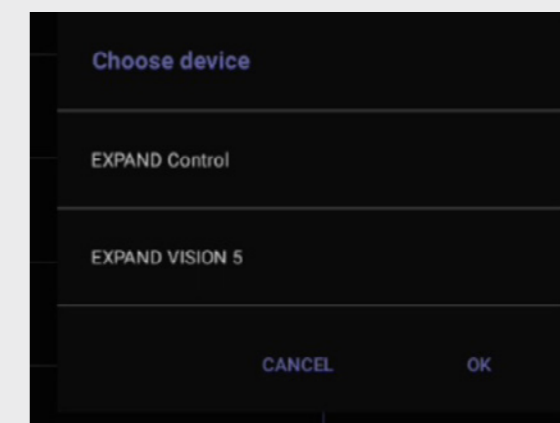


Choose relevant unit. It is recommended to start with the EXPAND Vision 5 video device as you will lose pairing between EXPAND Control and EXPAND Vision 5 once IP address is changed. Afterwards, change the IP address of the EXPAND Control. You may need to reboot both devices to get the pairing running again.

NB! The devices have to be in the same subnet to successfully pair.

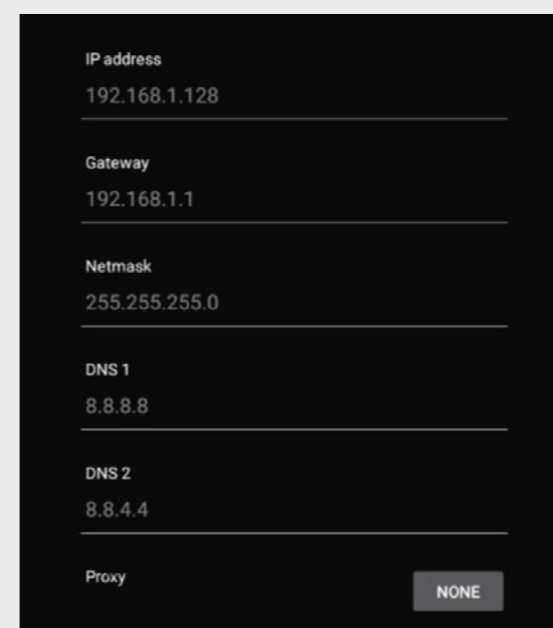


Insert your network data

Proxy Settings

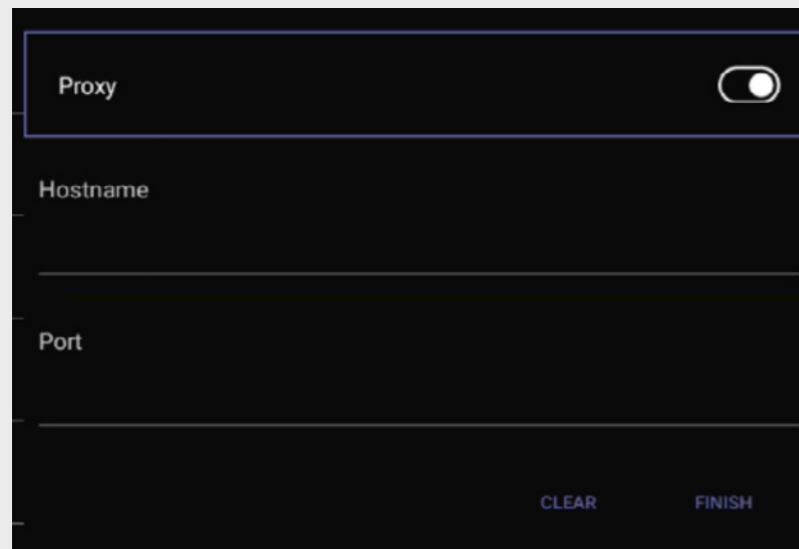

Device Settings > Proxy Enable Proxy and insert Hostname and Port (Optional)


Factory Reset EXPAND Vision 5

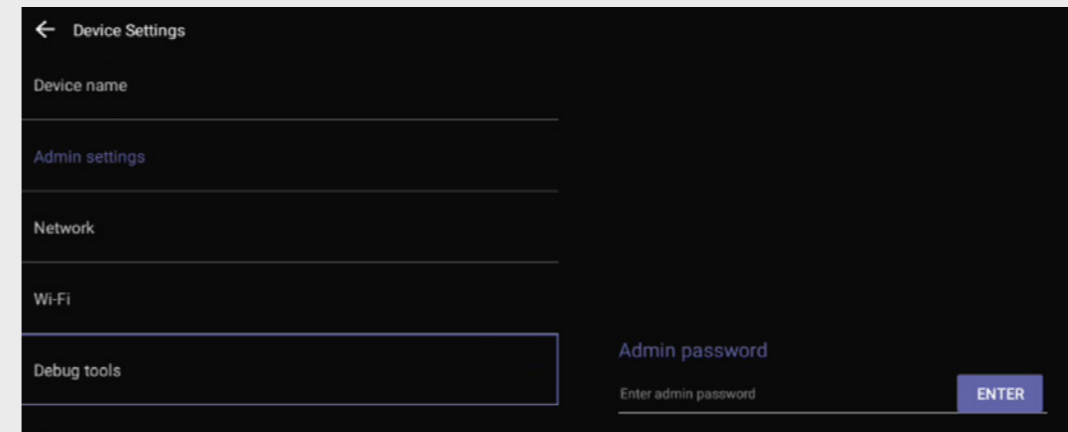


Device Settings => Debug Tools => default password is 0000.

Always start with the video device as pairing will be lost between controller and video device.


USB Mode

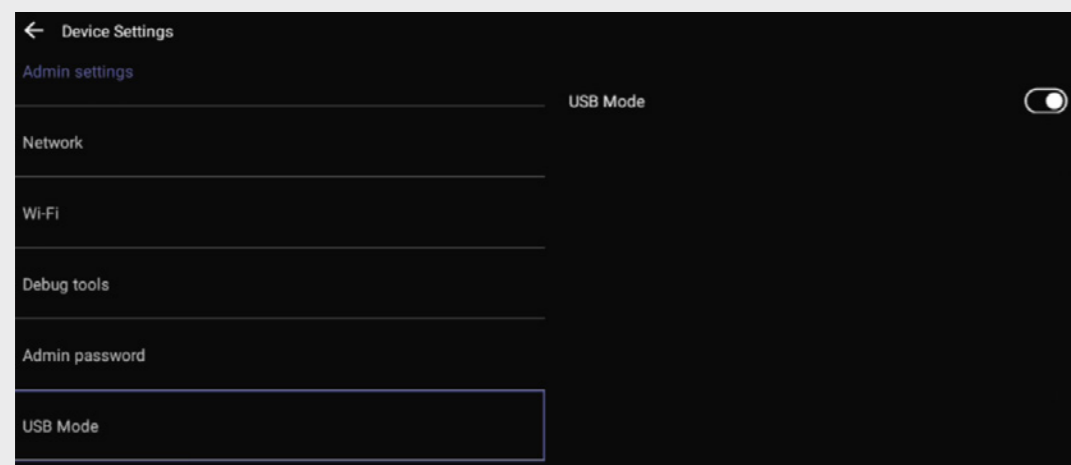

USB mode is on by default

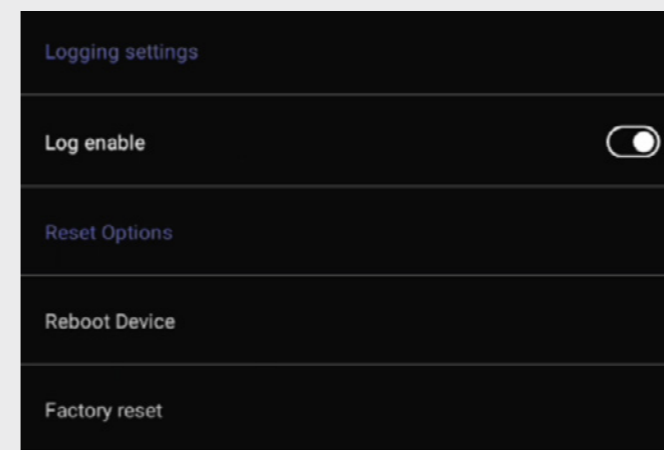


Choose Factory reset

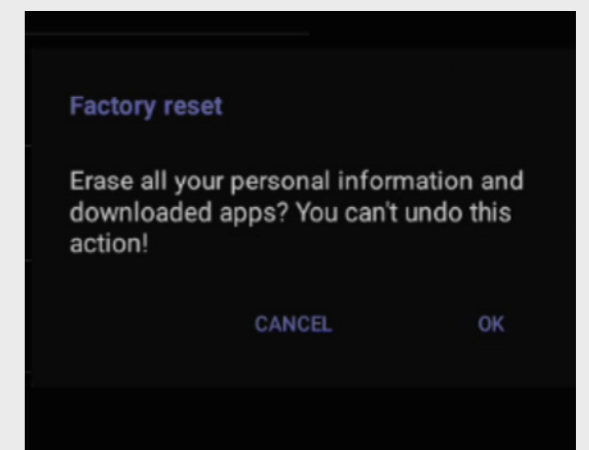


To factory reset the device choose ok or cancel to stop the reset.


Factory Reset EXPAND Control

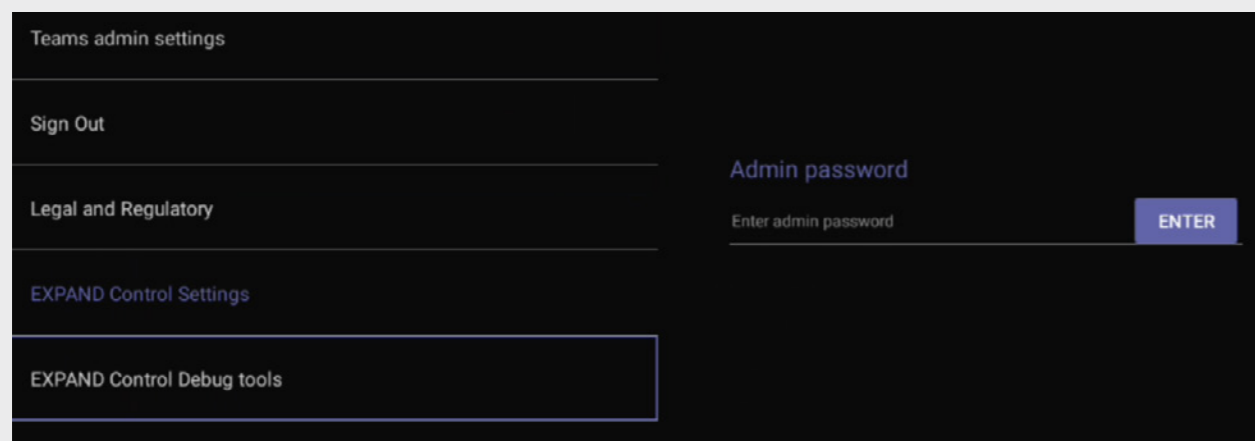

Device Settings > EXPAND Control Debug Tools > default password is 0000

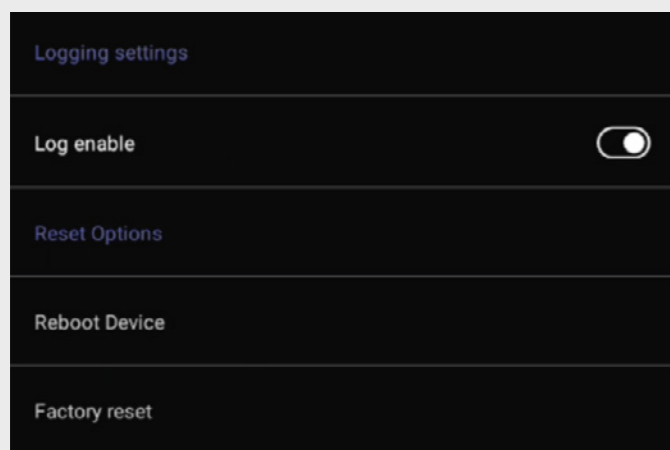


Choose Factory reset

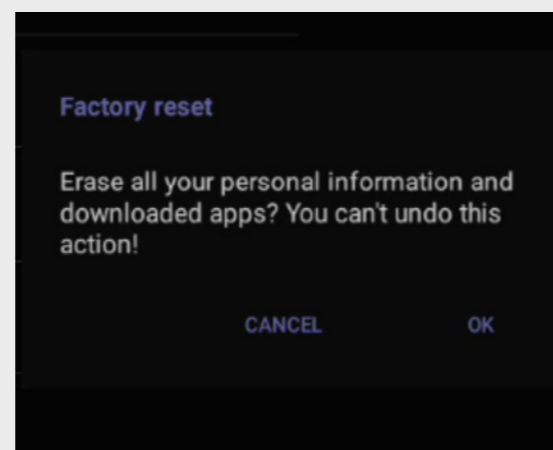


To factory reset the device choose ok or cancel to stop the reset.

EPOS Manager Provisioning

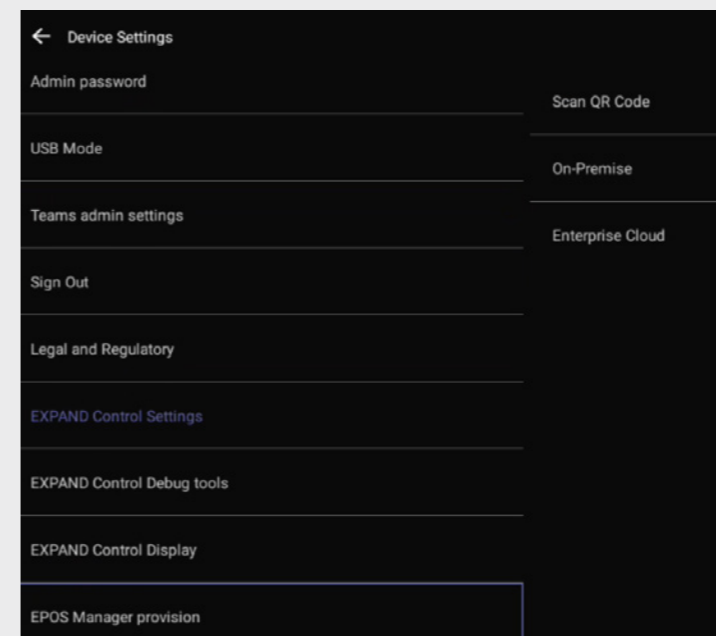


If you didn't enroll the device into EPOS Manager to begin with, you can create your QR code and insert the QR Code in the system. Scan you QR code, choose on-prem and Enterprise Cloud.

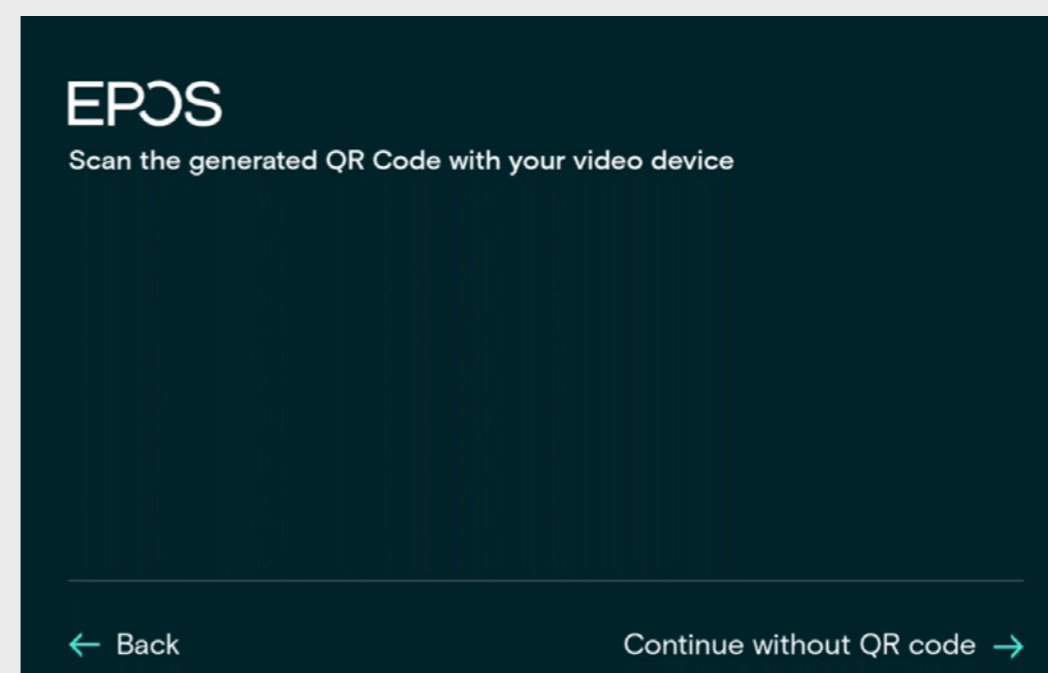


EXPAND Control Scan QR code
Scan QR code > point your QR code to the camera

Camera Settings

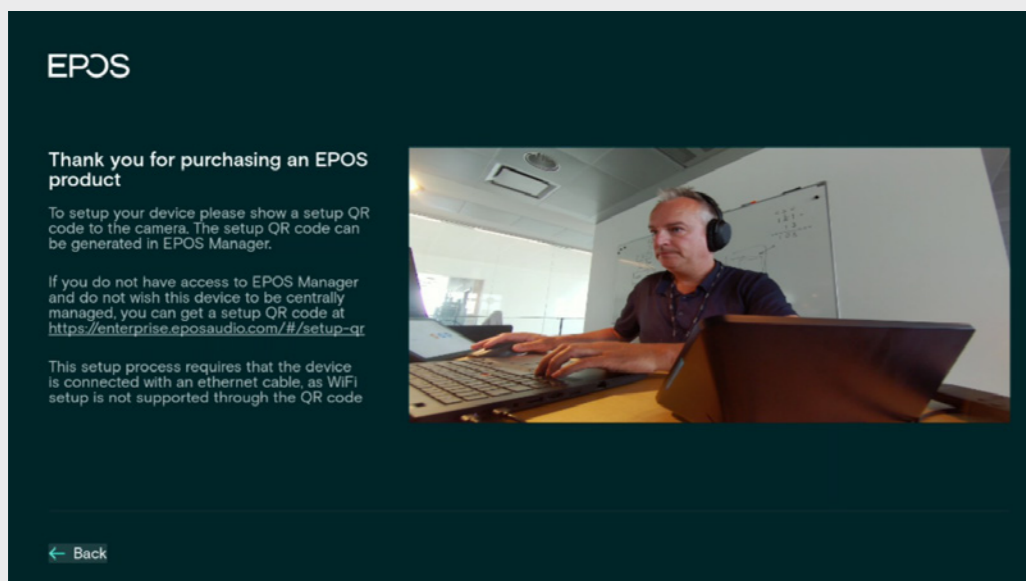


Monitor scan QR code

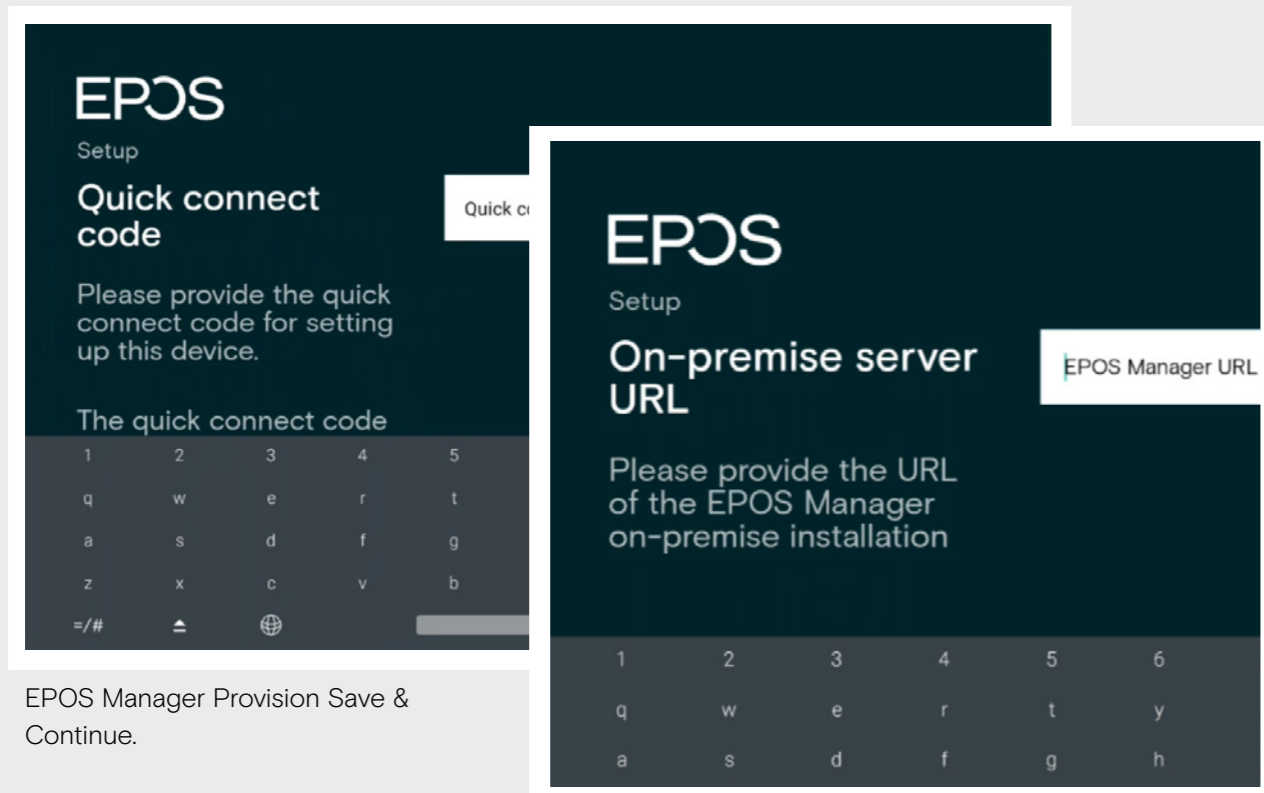

EPOS Manager Provision Save & Continue.

On premise URL

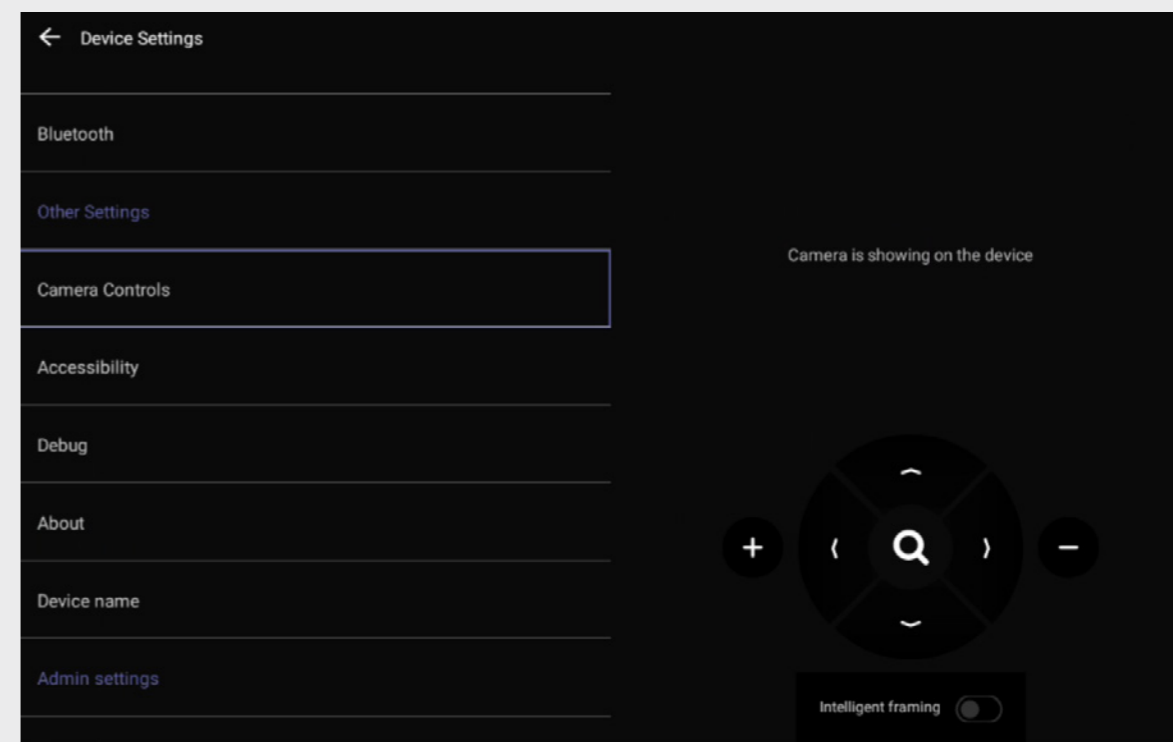

Device settings > Camera settings

Video feed will be displayed on the monitor.

Ensure the camera is properly adjusted. You also have the option to enable intelligent framing. This feature allows the camera to adjust the video feed based on the number of people and their positions in the video room.

Learn more about how to install and use the EXPAND Vision 5 here:

Access the learning videos:

[EPOS Employees](#)

[Partners and Customers](#)

THE POWER OF AUDIO

EPOS

EPOS Group A/S
Industriparken 27
2750 Ballerup, Denmark
eposaudio.com